



- A Heat exchanger
- D Hot water tank
- F Electronic controller
- 1 Ball valve
- 2 Single check valve
- 4 Safety valve
- 9 Strainer
- 10 Circulator pump
- 11 Domestic hot water pump
- 15 Sensor pocket, double
- 16 Outdoor sensor
- 18 Thermometer
- 19 Surface sensor
- 20 Filling/drain valve
- 22 Test connection
- 23 Ball valve
- 24 Delivered loose with unit
- 25 Pressure gauge with ball valve
- 26 Pressure gauge
- 27 Actuator
- 29 2-way motorized valve
- 30 Flow control w. control valve
- 31 Differential pressure controller
- 41 Fitting piece, energy meter
- 44 Immersion sensor
- 48 Air escape, manual

Obs:  
 Gemina Termix recommends the mounting of balancing valves on the main central heating pipes and on the central heating return pipe directly in front of the district heating unit.

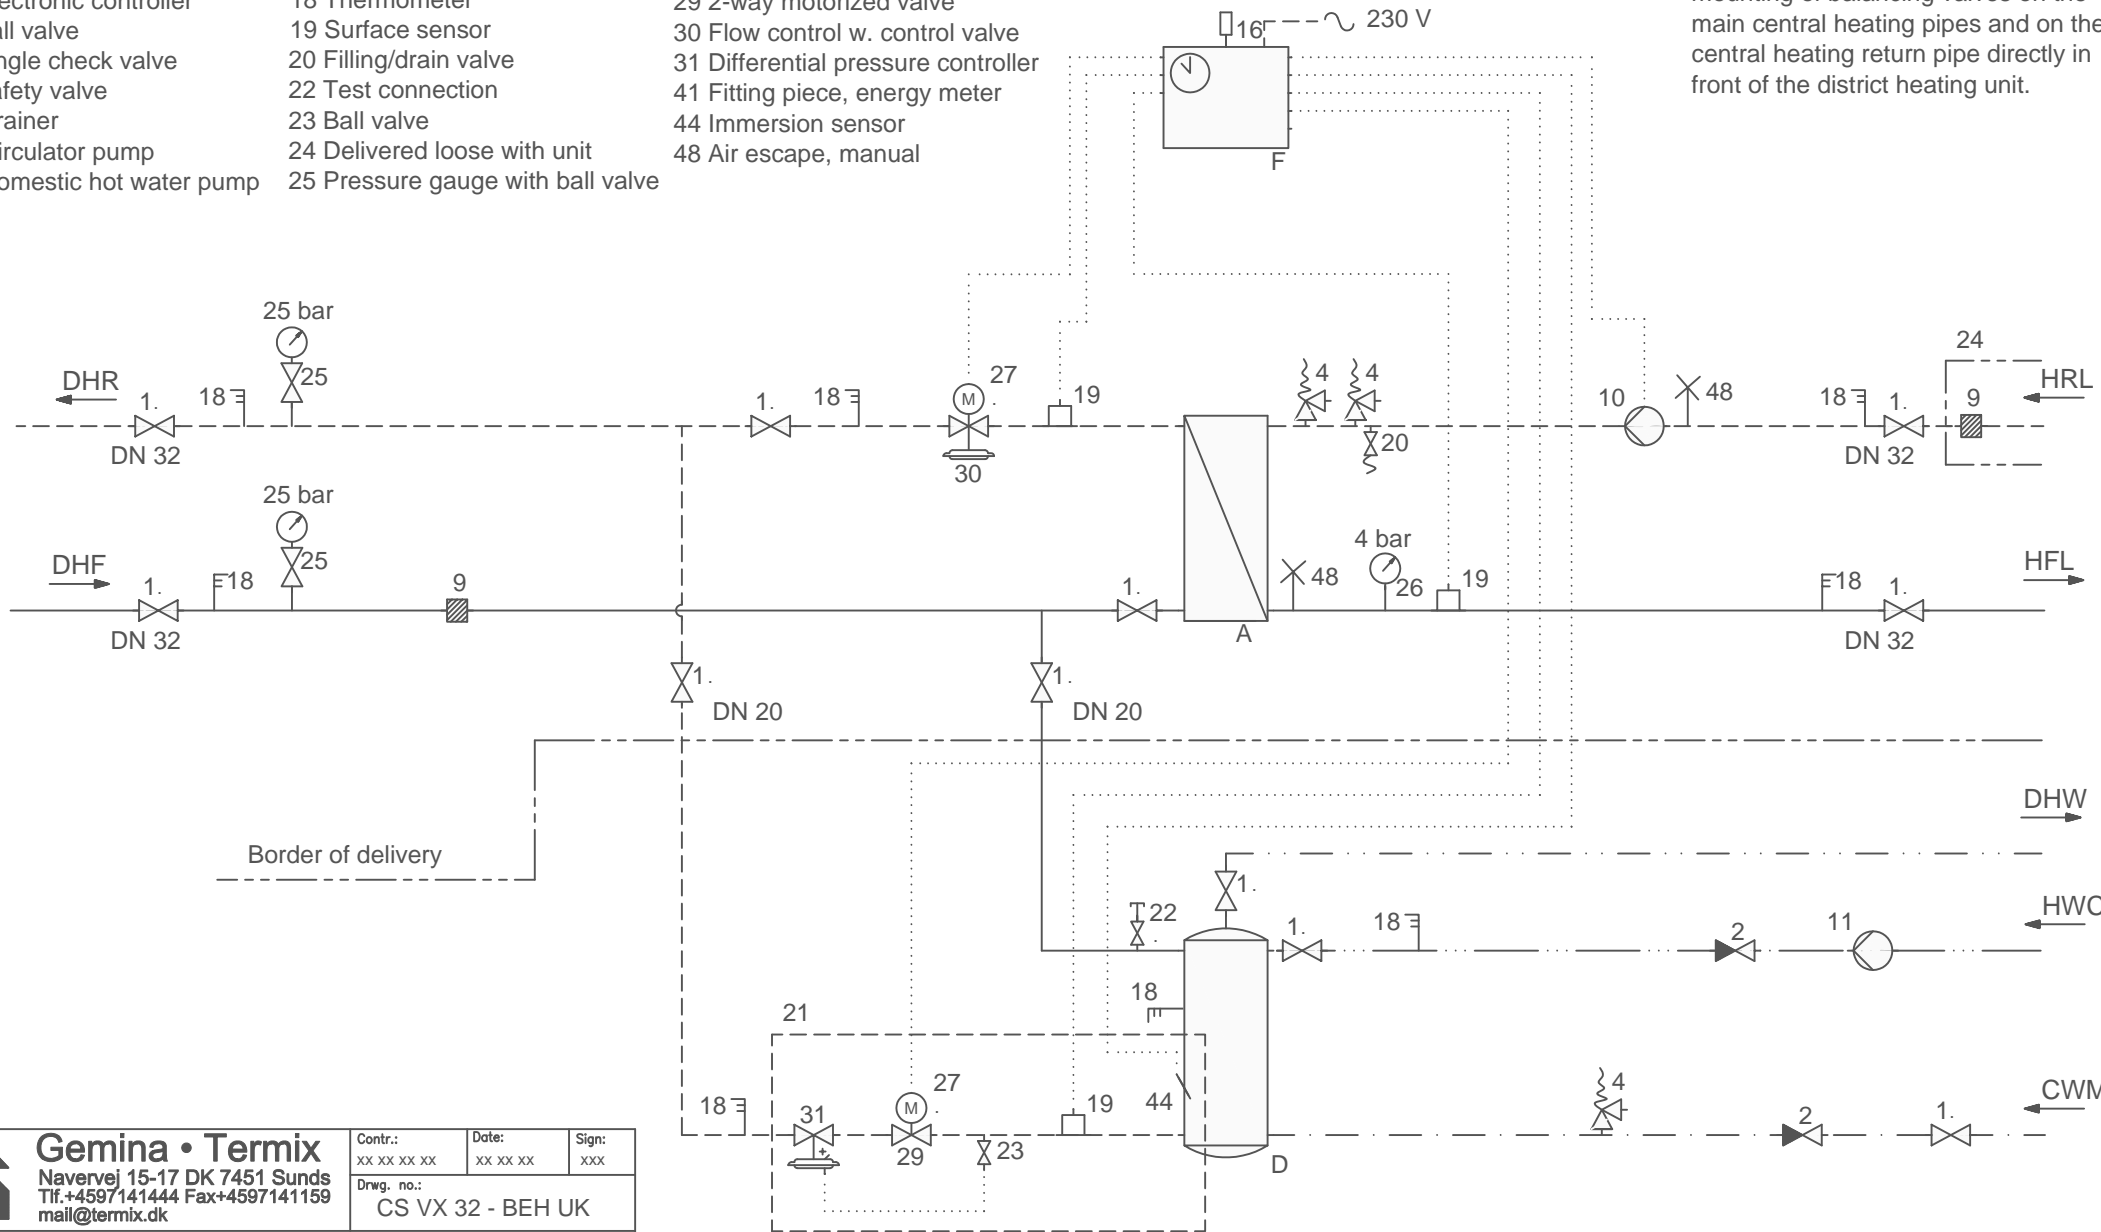

 <b>Gemina • Termix</b> Navervej 15-17 DK 7451 Sunds Tlf.+4597141444 Fax+4597141159 mail@termix.dk	Contr.: xx xx xx xx	Date: xx xx xx	Sign: xxx
	Drwg. no.: <b>CS VX 32 - BEH UK</b>		
Title: <b>Termix Compactstation type VX 32 - BEH</b>			
Diagram District Heating substation			
Rev:	Date:	Sign.:	