


- A Heat exchanger
- F Electronic controller
- 1 Ball valve
- 4 Safety valve
- 9 Strainer
- 10 Circulator pump
- 15 Sensor pocket, double
- 16 Outdoor sensor
- 18 Thermometer
- 19 Surface sensor
- 20 Filling/drain valve
- 24 Delivered loose with unit
- 25 Manometer with ball valve
- 26 Manometer
- 27A Actuator with spring return
- 30 Flow control w. control valve
- 41 Fitting piece, energy meter
- 48 Air escape; manual

Obs:  
 Gemina Termix recommends the mounting of balancing valves on the main central heating pipes and on the central heating return pipe directly in front of the district heating unit.

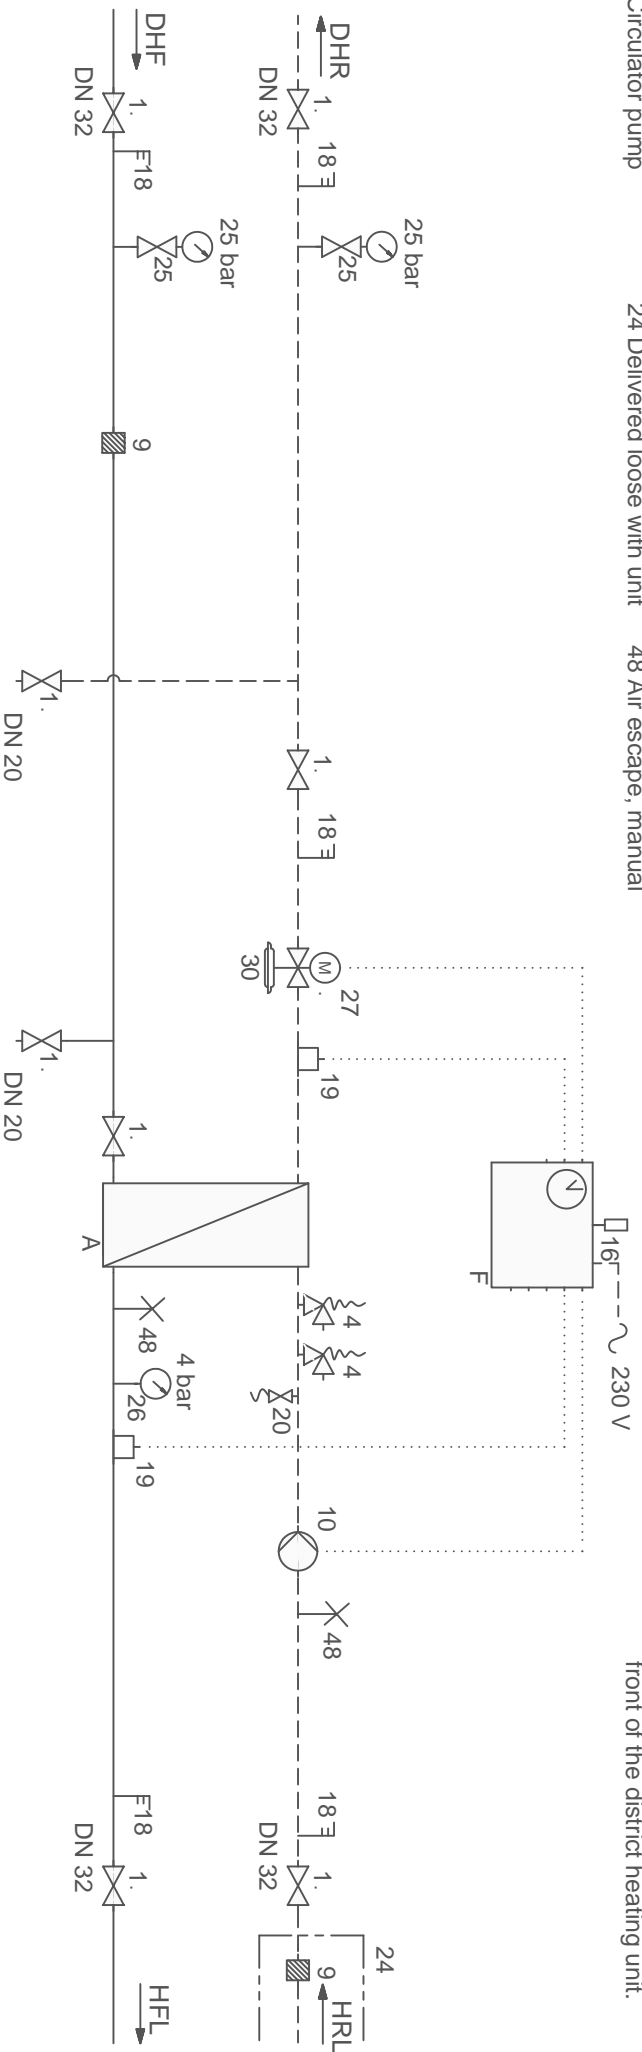

**Gemina • Termix**  
 Navervej 15-17 DK 7451 Sunds  
 Tlf: +4597141444 Fax: +4597141159  
 mail@termix.dk

Contr.:	Date:	Sign:
xx xx xx xx	xx xx xx	xxx
Dwg. no.:	CS VX 32 UK	

Title:  
 Termix Compactstation type VX 32

Diagram  
 District Heating substation

Rev:	Date:	Sign.: